



3841 Quest Court #13
 Shingle Springs, CA 95682

ph: 530 677-8111 web: www.inchwormgear.com

P/N: 300-0053

Page: 1 of 3

Rev. Date: 12/22/08

2WD PRERUNNER AUTO TRANS x 23 SPLINE GEAR DRIVEN CASE

Application: '95-'04 PreRunner Tacoma Trans to '79-'95 4 cyl. Turbo Transercase

KIT INCLUDES:

No.	Part No.	Qty.	Ck. Box	Description
1.	240-0050	1		Adapter Plate - PreRunner Adapter
2.	240-0051	1		Adapter Casting - PreRunner Adapter
3.	160-0007	1		Oil Seal - 23 Spline Input
4.	160-0401	1		Coupler - 23 x 23 Spline
5.	160-1601	1		Spacer - OD 1.5" - ID 1.38" - Length .5"
6.	120-0060	1		Hardware Kit - PreRunner Adapter
7.	100-1202	2		PreRunner Billet Nut
8.	100-0416	4		Bolt - Socket - Cap - 10m x 1.5 x 55mm
9.	100-0413	6		Bolt - Socket - Cap - 10m x 1.5 x 30mm - Blue Coated
10.	100-0409	4		Bolt - 14m Hex - 10m x 1.25 x 40mm
11.	100-0801	4		Washer - Flat - 10m
12.	100-0802	10		Washer - Lock - 10m
13.	100-0401	2		Bolt - Socket - Cap - 10m x 1.25 x 40mm
14.	100-2001	1		Cover Plate - Forward Shift Opening
15.	100-0402	5		Bolt - Socket - Button - 8m x 1.25 x 20mm
16.	100-2002	1		Cover Plate - Speed Sensor Hole - PreRunner Casting
17.	100-2003	1		Cover Plate - Speed Sensor Hole - PreRunner Adapter Plate
18.	100-0415	1		Bolt - Hex - 6m x 1.0 x 15mm
19.	100-0805	1		Washer - Lock - 6m
20.	100-0803	4		Washer - Flat - 8m
21.	100-0804	5		Washer - Lock - 8m
22.	260-0053	1		Instruction Sheet - PreRunner Adapter - PreRunner Tacoma Automatic Trans x 23 Spline Gear Driven Tcase

Note on this Kit:

The PreRunner Adapter Kit utilizes the combination of 2 adapters. The adapters must be installed in the correct order with the transercase. Incorrect order of installation can result in leakage, cracking and non functioning adapter kits. New hole(s) in the floor will be necessary in order to shift the transercase(s). The location of the hole will depend on single/dual cases, forward shift or top shift. Your application might be different so it is best to measure for yourself to get the correct location of the hole(s). Crossmember mounts and driveline modifications will be necessary to make

PLEASE READ: The components of this kit have been machined for specific applications. Double check you have the correct application for this adapter kit. Any modifications to this kit or the parts in it will void any warranty or return privileges. The instructions are designed to provide information about this adapter. Information about torque specifications, vehicle stabilization, disassembly, fluid recommendations and other related data is best found in repair manuals or factory service manuals available at auto parts stores or dealerships.



3841 Quest Court #13
Shingle Springs, CA 95682
ph: 530 677-8111 web: www.inchwormgear.com

P/N: 300-0053

Page: 2 of 3

Rev. Date: 12/22/08

your setup work.

[Note on Clocking Adapters:](#)

This Adapter Kit is Clockable. The major benefit to clocking your transference is ground clearance. It is important to note that clocking can cause clearance issues with the floor, e-brakes, shift levers etc. and mounting issues with the crossmember. Before final assembly test fit the transference in your truck to see if you would like to clock your cases or not. If so make the necessary adjustments before final assembly and install of transfer cases.

[TRANSMISSION PREPARATION:](#)

Remove Flange, Speed Sensor and Tailhousing from the back of the transmission. Do not remove speed sensor rotor from shaft. Your Transmission will not shift without it!

[ADAPTER INSTALLATION:](#)

Ensure stock speedometer gear and sensor rotor are in place (see diagram), install Coupler Spacer (no. 5) by sliding it over the spines until contact is made with speedo gear. Install Transmission to Transference Coupler on output shaft of transmission, light tapping with a brass hammer may be necessary to get the coupler in contact with the spacer.

The first adapter to be bolted up is the PreRunner Adapter.

Clean mounting surface of adapter and transmission. Evenly spread silicone on back of transmission and install Inchworm Prerunner adapter with the Logo facing the back of the truck. Use 2 Socket Head Bolts (no.9) for the upper 2 holes in the Adapter and 4 Socket Head Bolts (no.8) for the lower 4 holes. Lock Washers are not necessary for these bolts. Torque to factory tailhousing specifications.


The Adapter Casting is Bolted to the PreRunner Adapter Next. If you are using a top shift transference install Cover Plate (no. 14) on Adapter Casting with silicone using Bolts (no. 15) and Washers (no. 20 and 21). Clean mounting surface of PreRunner Adapter and the round side of the Adapter Casting. Evenly coat mounting surface of Adapter Casting with silicone and install behind the Inchworm Prerunner Adapter in the desired clocking holes with the remainder of the Socket Head Bolts (no.9) and Lock Washers (no.12). Coat the Billet Nuts (no. 7) with silicone and slide through the Inchworm Adapter to accept the upper 2 bolts going through the Adapter Casting.

Install Speed Sensor into Inchworm Prerunner Adapter note: coat threads of speed sensor bolt with silicone prior to installation to prevent leaks. Install Speedometer Cover Plate (no. 16) with silicone and Bolt (no.15) with Lock washer (no.21) to cover the unused speedo holes in the Adapter Casting. The cover plate (no. 17) can be discarded.

[TRANSFERCASE\(S\) INSTALLATION:](#)

The Cases are installed last. Clean mounting surface of Adapter Casting and Transference free of oil, debris, etc. Apply hi pressure grease to splines on input shaft of t-case. Evenly coat the mounting surface of the transference with silicone. Install Transference(s) onto Casting in the truck using Hex Head Bolt (no.10) with Flat and Lock Washers (no. 11 and 12) for the lower four holes and Socket Head Bolt (no. 13) with Lock washers (no.12) for the upper two holes **Support weight of transference(s) with a transmission jack. Adapter may be damaged if the weight of the transference(s) is not supported.** The crossmember will support the weight once the case(s) are installed.

PLEASE READ: The components of this kit have been machined for specific applications. Double check you have the correct application for this adapter kit. Any modifications to this kit or the parts in it will void any warranty or return privileges. The instructions are designed to provide information about this adapter. Information about torque specifications, vehicle stabilization, disassembly, fluid recommendations and other related data is best found in repair manuals or factory service manuals available at auto parts stores or dealerships.

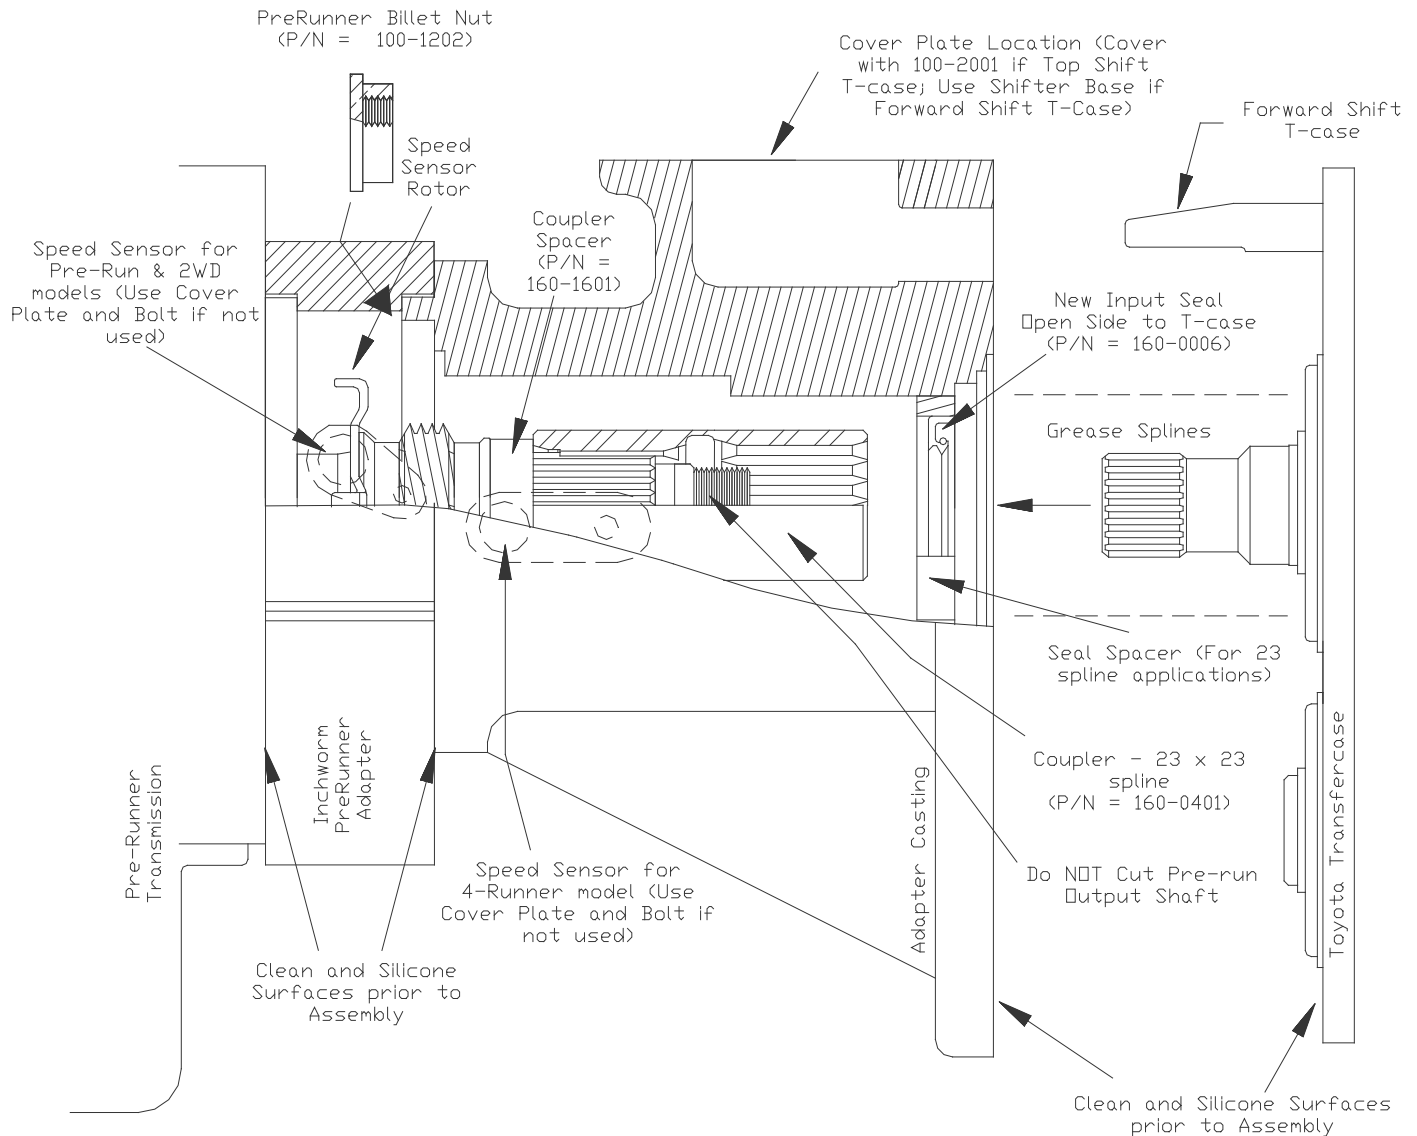

PLEASE READ: The components of this kit have been machined for specific applications. Double check you have the correct application for this adapter kit. Any modifications to this kit or the parts in it will void any warranty or return privileges. The instructions are designed to provide information about this adapter. Information about torque specifications, vehicle stabilization, disassembly, fluid recommendations and other related data is best found in repair manuals or factory service manuals available at auto parts stores or dealerships.